

FoxESS H1(G2) & AC1(G2) series - Commissioning

This brief installation instruction provides a quick overview of all the necessary steps. Additional information, safety instructions, references, and sources can be found in our [HelpCenter](#). The Installation instructions are only valid for the integration of the energy management system and the configuration of relevant assets. Make sure to carefully read the **safety instructions** and adhere to the **infrastructural requirements for a gridBox gateway installation**.

Required

- FoxCloud2.0 App
- Latest firmware, at least Master 1.45, Manager 1.31



Connection

1. Install the inverter according to the FoxESS installation manual.
2. Connect the inverter to the local network with an Ethernet cable.

Configuration

1. Install the FoxCloud2.0 App and connect the inverter using the QR code on the inverter.
2. Complete the general installation process of the gridBox.



CAUTION

Ensure that the inverter has been correctly commissioned via the app in accordance with the manufacturer's instructions. The app must also not display any errors relating to the data logger, inverter, battery, or energy meter.

3. The configuration of the inverter is carried out as part of the commissioning of the gridBox. No additional configuration of the inverter is required